

HOW TO GET ON THE
HARRIET NETWORK
web edition

INTRODUCTION TO MESHTASTIC

The Meshtastic Web Client is a browser-based app that allows you to control and communicate with your Meshtastic devices directly from your web browser. You can access the hosted version or self-host the Web Client on your local server.

Key Features:

- **Hosted Version:** Use the web client directly from client.meshtastic.org.
- **Self-Hosting:** Set up your own Meshtastic Web Client on a server.
- **Compatible Browsers:** The web client works in all major browsers, with optimal performance on Chromium-based browsers like Google Chrome or Microsoft Edge.

CONNECTING YOUR DEVICE TO THE WEB CLIENT

Via Bluetooth:

- Ensure Bluetooth is enabled on your computer.
- Click the "Connect" button in the Web Client to find your Meshtastic device. (The default Bluetooth password is 123456.)

Via USB (Serial):



- Plug in your Meshtastic device to your computer via USB.
- The Web Client will recognize the device through the Web Serial API.

Via HTTP (for esp32 devices):

- You can also connect via HTTP using the IP address of your device, though it's limited to esp32 devices.
- Once connected, the Web Client will display a cloud icon, showing the connection status.


Web Bluetooth

Allows web sites to communicate over GATT with nearby user-selected Bluetooth devices in a secure and privacy-preserving way.

IE	Edge	Firefox	Chrome	Safari	iOS Safari	Opera Mini	Chrome for Android	Android Browser	Samsung Internet
9	139	142	139	18.4	18.4			4.4	26
10	140	143	140	18.5	18.5			4.4.4	27
11	141	144	141	26.0	26.0	all	141	141	28
		145	142	26.1	26.1				
  Partial Support	Global: 81.22% + 0% = 81.22%								


CONFIGURING YOUR DEVICE VIA WEB CLIENT

- **Set Device Region:** In the Settings menu, select the Region that corresponds to your device's location for correct frequency settings.
- **Change Device Name:** Set a unique name for your Meshtastic device to easily identify it in your network.
- **Additional Settings:** Configure any other device settings, such as message types and node information.

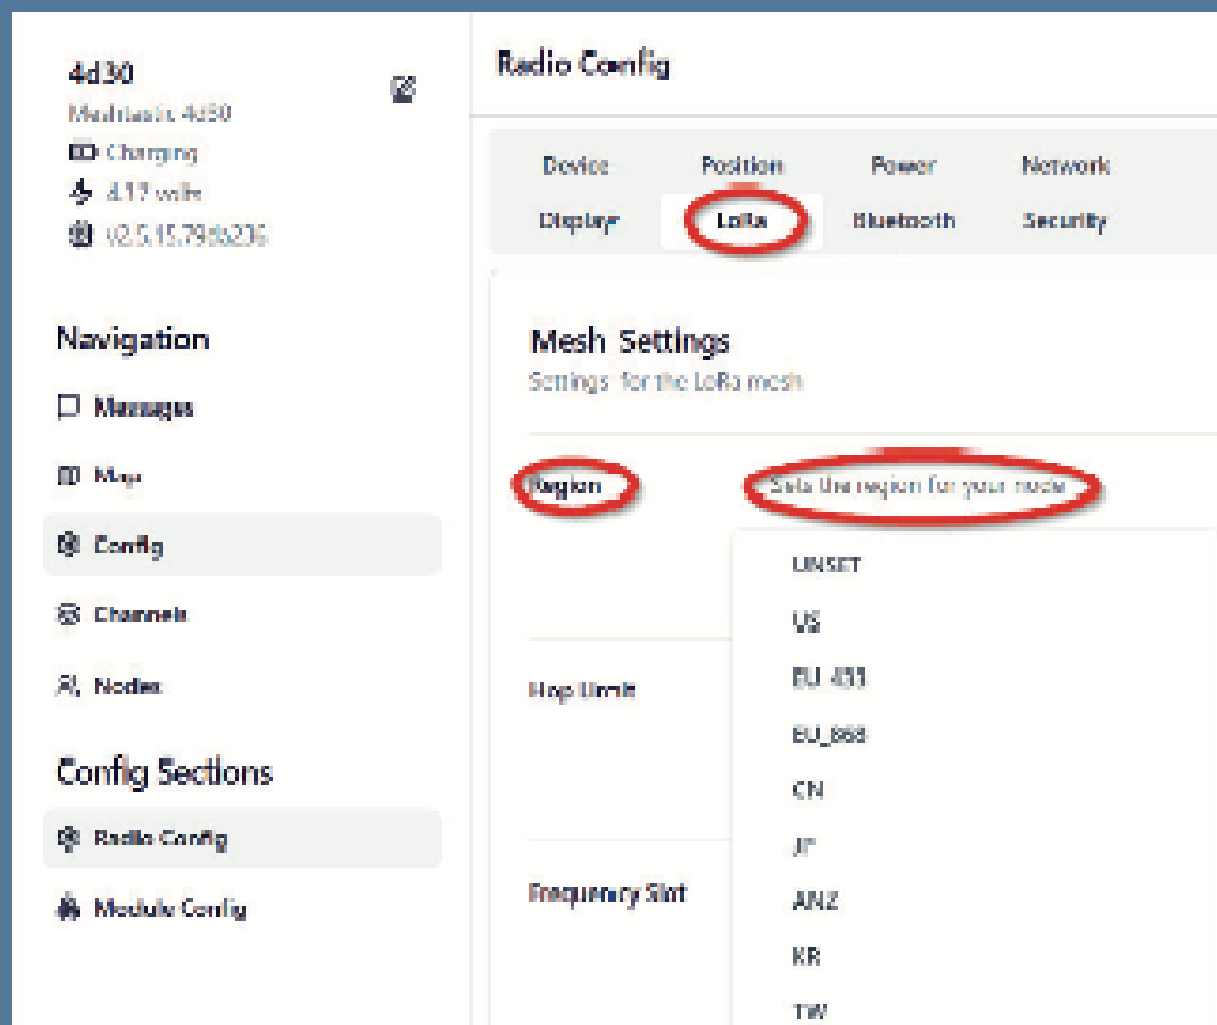

SENDING AND RECEIVING MESSAGES

- **Private Messages:** Navigate to the Messages tab, select a contact or device, type your message, and hit Send.
- **Broadcast Messages:** Use the Broadcast option to send messages to all connected devices in your network.
- **View Messages:** Incoming messages are displayed in the Messages tab, showing both private and broadcast messages.

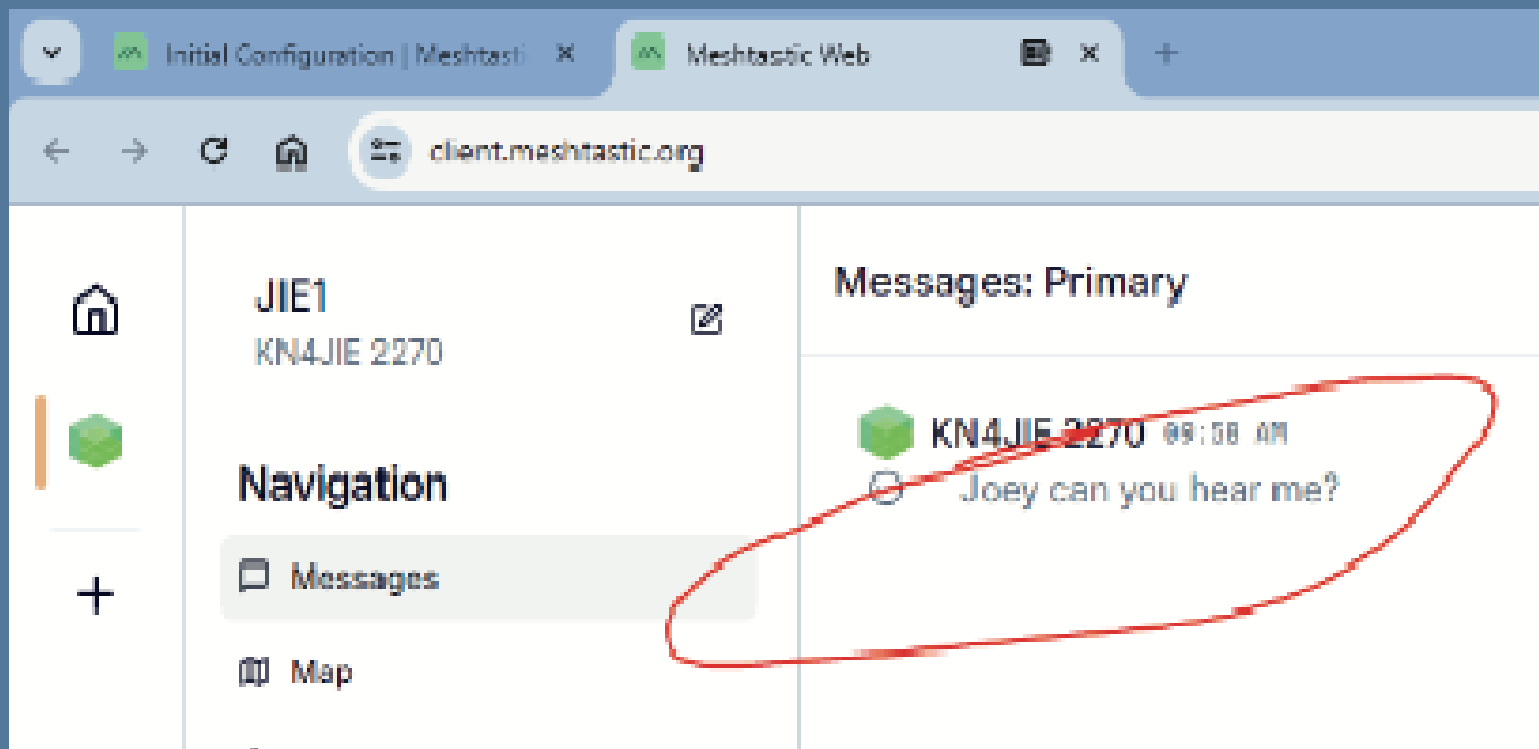


TROUBLESHOOTING AND SUPPORT

COMMON ISSUES:

- **Device Not Connecting:** Ensure your device is powered on and within range. Check the Bluetooth or USB connection settings.
- **Messages Not Sending:** If messages are not sending, check the cloud icon for connection status. Ensure the Web Client is properly connected to your device.
- **Bluetooth Issues:** Make sure your browser supports Web Bluetooth. If the connection fails, try restarting the app or browser.

Support: For further troubleshooting, visit the Meshtastic Help Center or refer to the Meshtastic community forums for advice and support.



To this system
we are the
nightmare that won't
go away... Our presence
marks their end and
the people's beginning.
-David Johnson

harrietnetwork.com

harrietnetwork@protonmail.com